

# Pre-Finished internal door pair maker instructions



Please read this complete set of assembly instructions before starting the installation and only when you understand the construction method start to follow the step by step guide.

## Installing the door pair maker

With the two doors hung in the frame (without the door pair maker being fitted) the gap between the two doors at the centre must be a continuous 12mm. Decide on which door is to open first, (this will be the door that is **NOT FITTED** with the door pair maker). **Diagram 1**.

Having decided which door is to have the door pair maker fitted to it, remove the bottom notching of the door pair maker as shown in **Diagram 2**. The top pre cut notch remains at the top allowing for the fitted door stop on the frame.

Temporarily fit the door pair maker to the door edge and ensure that the doors close and open correctly.

There should be a 2mm gap between the opening door edge and the door pair maker. If the opening door is binding on the door

pair maker when closing, remove the door pair maker and plane a small amount off from the door edge. Temporarily refit the door pair maker and check for the correct fit.

Glue and pin the door pair maker to the door edge ensuring the door pair maker is flush with the top and bottom of the door. **Diagram 3**.

All internal frame dimensions are made up from the following:  
 2mm gap between door edge and frame + door width + 12mm gap between the doors + door width + 2mm gap between door edge and frame. **Diagram 4**.

If this product is cut or trimmed it will require finishing before fitting.

The internal frame sizes (rebate to rebate) including the door pair maker and allowing for clearances are approximately as follows...

### Door size and door pair maker:

2 x 21" doors plus door pair maker = 1082mm

2 x 24" doors plus door pair maker = 1236mm

2 x 27" doors plus door pair maker = 1388mm

2 x 30" doors plus door pair maker = 1540mm

2 x 33" doors plus door pair maker = 1692mm

