

Delivery

This is how your doorsets will look once prepared and packed ready for delivery. They are packed onto a pallet with an MDF base sheet.

MDF 'transport pads' are attached and the pallet is braced to keep the doorsets stable during transit

The pallet is strapped and finally wrapped with a polythene pallet wrap to protect against damp and adverse conditions prior to installation.

For larger projects, the doorsets are palletised into plot order, ready for dispatch.

Doorsets should always be stored flat, ideally in the same room where they are to be installed. They should be protected from damp and dirt and located in an area where they will not be damaged during storage. Doorsets should be left in their protective packaging until ready to be treated and installed.

Doors should not be installed where extremes of temperature or humidity can occur, for example a newly plastered room. In new build environments the doors should only be installed as part of the 'final

fit' when the property is ready for final decoration. Gentle internal heating and good ventilation of the building will have a significant reduction with humid conditions.

Please ensure that you check your doorsets for any signs of external damage prior to unpacking. **Note:** Storing, installing or finishing the product in a manner not detailed in these instructions may invalidate the warranty.



Finishing our doorsets

Liners

All Simpli Doorsets are supplied with a White Primed liner, which must be painted with a top coat in situ.

On request we can pre-finish the liners for you here at XL Joinery, for an additional cost.

Pre-finished Doors

Pre-finished doors in our doorsets do not need finishing prior to fitting and therefore these doorsets can be installed straight away.

Unfinished Doors

Our Unfinished Oak doors and White Primed doors will need to be fully treated prior to, or immediately after install.


The top and bottom of the door, all lock, latch and hinge cut-outs will already have been factory treated during assembly.

Failure to treat all the remaining timber surfaces can lead to excessive changes in moisture content which will cause the timber to shrink or swell and possibly cause splits and distortion.


We can Pre-Finish our Unfinished Oak and White Primed doors for you on request, using our Colours by XL service.

Lining components

Standard lining components

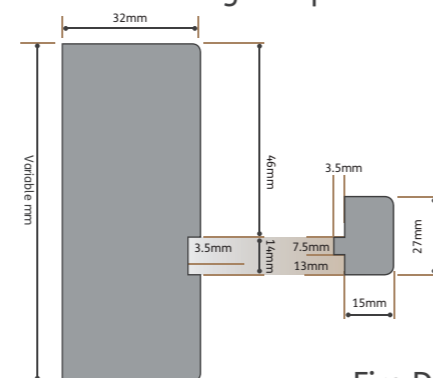

Fire Door lining components

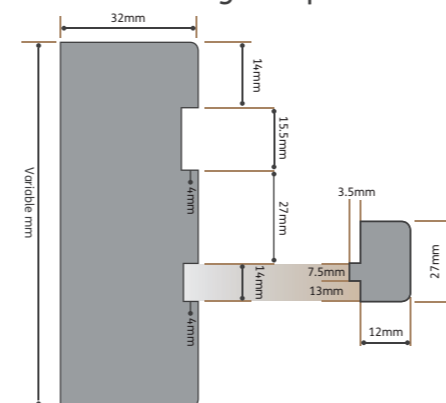

Fitting our doorsets in 9 easy steps



STEP 1

Slide the doorset into the opening until the fitting pads are touching the surrounding wall.



STEP 2

At this point the doorset can be squared using packers between the opening and the frame.



STEP 3

The doorset is secured into the opening by fixing three screws into the groove next to and three opposite the hinges. Two further screws should be fixed into the head.



STEP 4

The doorset should now be square with equal gaps between the door and the frame.



STEP 5

Remove the temporary stop lath.



STEP 6

Remove the bottom brace and the fitting pads.




STEP 7

Cut the stop lath (supplied) to the height and width of the door. Slide the stop lath into the groove which will cover the screws. Once installed the stop lath can be fixed in place.



STEP 8

At this point finish the door in accordance with the finishing instructions and paint the Unfinished White Primed liner.

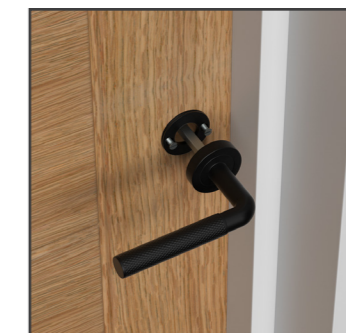

STEP 9

Finally install the handle and test the doorset prior to use.